


E-FIN Powered Electric Fin

Powered Electric Fin - For Paddle Boards

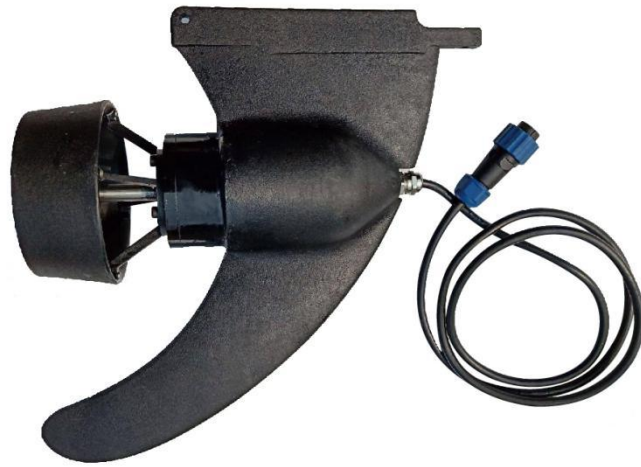

Includes:

- Brushless Motorized fin
- Wireless Remote control
- High Efficient lithium Battery
- Charger

E- Fin Power or boost speed of your SUP. Use for touring, fishing, recreation, or as a board speed booster. The E- Fin fits in a standard SUP or surfboard center fin box. Multispeed remote control, fin with motor, battery and battery charger included.

BATTERY CASE

Battery case is water resistant. Features an on -- off switch, 1 charge port, and 1 power cable port. Battery should be lashed securely to the board deck via, 2 TO 4 tie down plugs , or a strap around entire board.


The Electric Fin battery should be charged for 6hours before use.

BATTERY LIFE:

- 1 gear 2mph/s- 10hours
- 2 gear 3mph/s- 5 hours
- 3 gear 5mph/s- 2.5hours

BATTERY SPECIFICATION:

- Rated voltage : 33.3V
- The battery capacity : 12AH

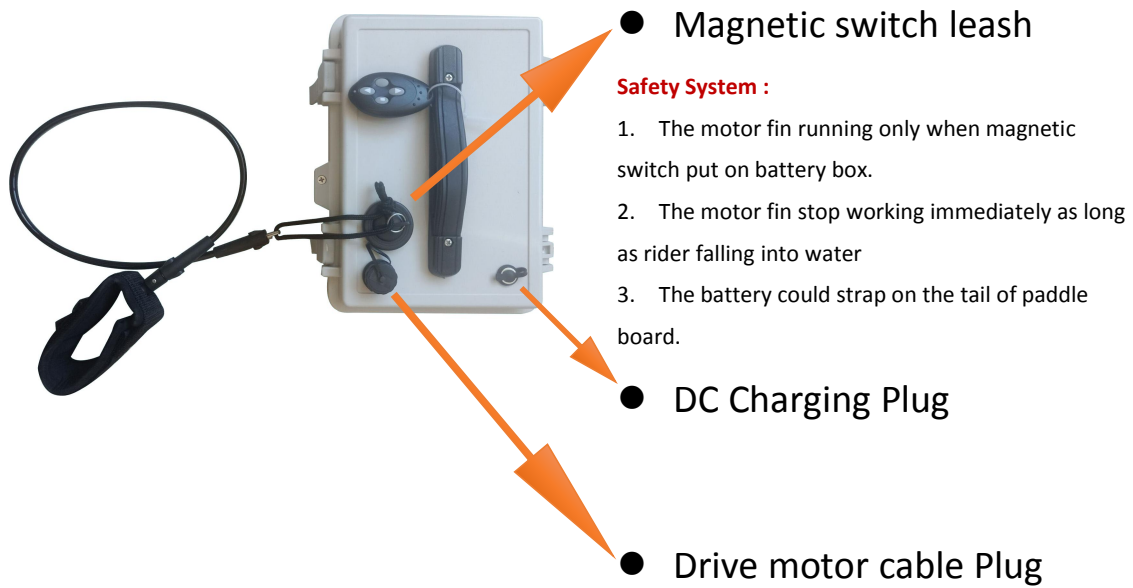

CHARGAR:

- Rated current : 2A
- Rated voltage : 33.3V

Strap or bungee the battery to board, via deck plugs if there. A bungee cord or strap will hold battery as shown in pic. Rinse off fin and battery after each use. If there are no tie down plugs in your board, tie strap around the bottom to top, passing the tie down under the carry handle. Always check to make sure all connections are tight.

- **Never open battery case around water.**
- **Keep fingers and toes away from propeller.**
- **Warranty 1 year on motor and battery under normal non commercial use.**

REMOTE CONTROL

Remote control is water resistant to 3 meters.

Remote control has 3 mode buttons .

△ -- Power / speed increase to propeller

□ -- Propeller power off

▽ -- Decrease speed of propeller



ASSEMBLY

Make sure to setup board on a dry or grassy area to protect your equipment.

Fin install. Place E-- - fin base in board box such that the end with the pin slides into the box slot.

Make sure the screw plat is in box, and screw removed. Slide fin back then press the forward part of the fin base into the box. align metal screw plate hole with fin base hole, pass screw thru to plate and secure.

Always wear a leash secured to SUP when using the E-- - Fin. It will keep you in range of board control. Remote may not be in range to cut off motor if a leash is not worn.

Damage to fin, if fin breaks due to impact. Is not covered. If water gets into battery box warranty is void Make sure all ports have water tight plugs in before operating.

SAFETY

THERE IS A RISK OF SERIOUS INJURY,OR DEATH FROM DROWNING.

Electric fin is for paddle boards, and electric paddle sports can be very dangerous and physically demanding because of the high speed. The user of this product acknowledges, understands, and assumes the risks involved in paddle sports. Must familiarize oneself with all local and national laws. Always wear a coast guard approved PFD(Personal Flotation Device).As well as a leg leash.

This fin is used on paddle board, so just do what you do on a SUP board. Not to jump or perform acrobatics on. Only stand or sit on this board. When in the water and not on dry land.

- Always wear approved PFD and leg leash.
- Check all the equipment prior to voyage, especially the rest of your battery.
- Do not operate under the influence of drug or alcohol.
- Children must be supervised by a responsible adult at all times.
- Do not exceed your padding ability; and know your limitations.
- Observe weather forecasts.

- Obtain local knowledge of conditions, marine environment, tides, and currents.
- Avoid sharp objects, and corrosive chemicals.
- Beware of offshore winds and currents.
- Beware of packing materials with children as they can cause suffocation.
- Never underestimate Mother Nature.

MAINTENANCE

- Periodically check and observe condition of the fin, battery and all accessories.
- Be sure to clean with fresh water and even a mild soap solution if there is any lingering residue from the elements. (Do not use detergents, abrasive cleaners, or silicon based products.)
- Remove battery and fin from board and clean them separately.
- Make sure everything is DRY and battery is full before storage to avoid damage and foul odor.
- When storing you can either leave in bag, or inflated. but be sure it is in a clean, dry place away from extreme temperature changes, animals, sharp objects etc.