



Thank you for your purchase!

Your efin package includes:

- Battery box
- Remote control
- Charger
- Motor mounted into fin
- Magnetic safety leash

The efin has 4 speeds and is controlled with a wireless RF remote.

Press the up button to increase speed, press the down button to decrease speed. Press the stop button to stop. Remotes are waterproof up to 2ft. Older oval shaped remotes are not fully waterproof.

To pair remote, connect the efin and the magnetic safety switch. Within a few seconds press and hold the stop button and up button on the remote, you should hear a beep when paired. Then press the up button a few times to turn the motor.

Charging time is 6-8 hours. Do not overcharge. Light is red when charging and turns green when fully charged. If the charger or box becomes hot to touch, disconnect immediately. Batteries come with some charge, but it is recommended to fully charge before each use.

One charge can last you over 5 hours at lower speeds and up to 2 hours at top speeds. Most customers report 1.5hrs of constant use at full speed.

Can get up to 5mph depending on board, rider, and conditions. Battery does not have a charge level indicator. Efin mounts into standard fin box just like a regular center fin. We have adaptors available to fit into standard slide in fin mounts, flip lock fin mounts, and a strap on adaptor for kayaks/canoes or other vessels. The Battery box goes on top of the deck and should be strapped down and secured in place. The efin is not intended for surf or whitewater use.

The leash has a magnetic safety switch. The magnet must be attached to the battery box for it to work and the leash attached to your ankle. Be sure to test that when the magnetic connection is broken, the efin stops. The magnetic switch is the on/off switch.

Battery is rated for 1500 cycles - recommended to charge at least once every month when not being used.

Never store or charge in a flammable area. Do not store or charge in hot areas or direct sunlight.

Saltwater use is ok – be sure to rinse with fresh clean water and dry after each use as you should with all your equipment. If the efin gets grass, seaweed, or other debris caught in it. Be sure to disconnect the efin from the battery before removing debris. Never place fingers or body parts near the propeller. It is very sharp and can cause injury. Efin should only be used by adults.

1 year warranty from date of purchase (does not cover damage from improper use, mounting, or impacts)

Download the manufacturer's manual from our website <https://www.tamarindoboards.com/powered-boards>

By purchasing and/or using a board or other equipment, you affirm that you are aware that stand up paddle boarding, surfing and foiling has inherent risks which may result or be associated with serious injury or death. You personally assume all risks involving the use thereof including, but not limited to, the risk of personal injury or death to yourself and others, as well as potential damage to property while using equipment, whether negligent, intentional, foreseen or unforeseen.

By purchasing and/or using this equipment, you irrevocably and unconditionally agree to indemnify, defend and save harmless, release and promise to not bring a claim of any nature against Tamarindo Board Co. (KAKA Enterprises, LLC) , or its dealers.